


Circuit Diagram

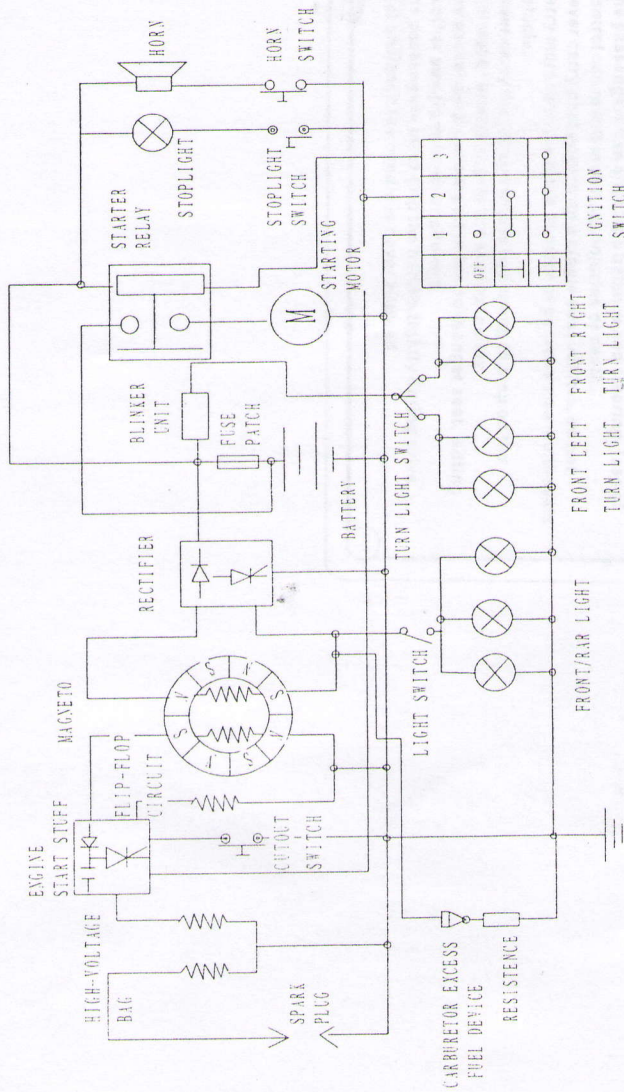

ed in the safety wire box.
 damaged, there is possibly
 and take out the safety wire
 e plate into safety wire box.
 ety wire box.
 screw bolt on Carburetor is
 of idle speed. Tighten the
 w down; loosen the screw
 You must adjust the speed
 when adjusting.
 of Carburetor need certain
 ct the dealers of franchiser
 s for the Steering Pole,
 g Pole are necessary.
 by pulling Pole and the